
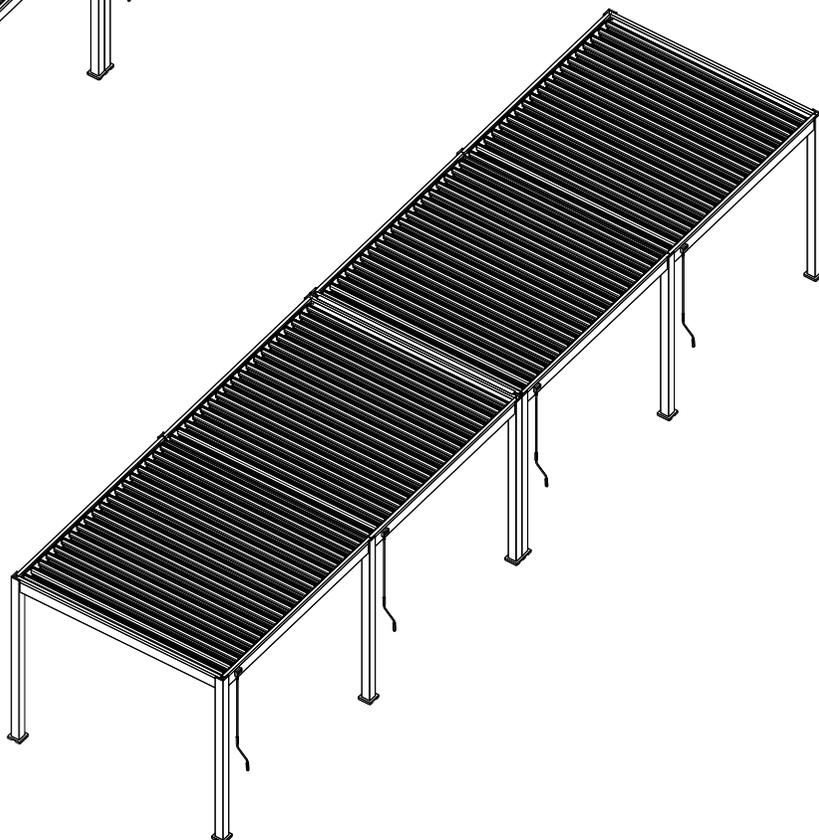


# Pergola joining kit- Horizontal direction

## Assembly Instructions

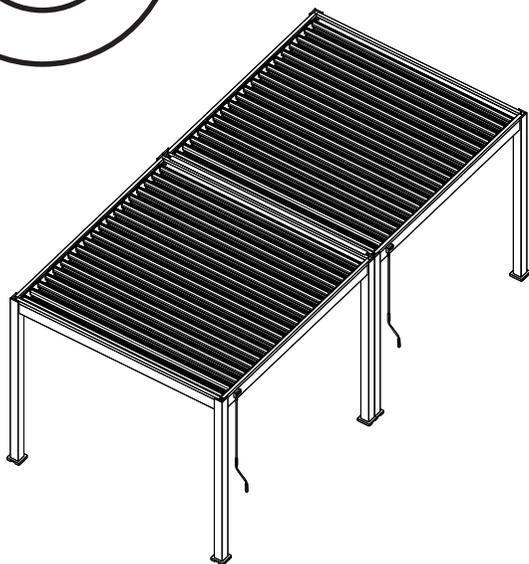

© f v p @paragonoutdoorcompany


Paragon Group USA

Customer Service Contact Information: 1-877-782-4482  
support@paragon-outdoor.com








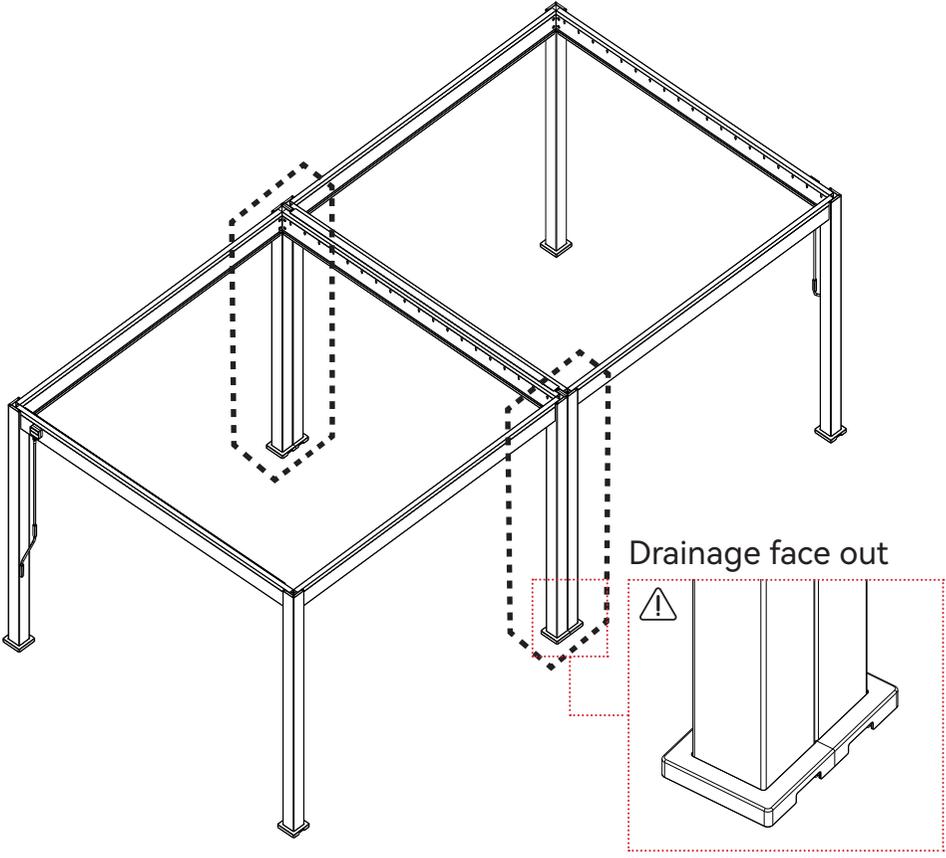


Drainage face out

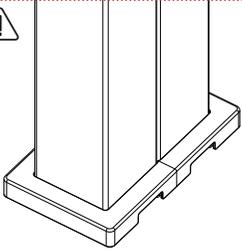


### Case 1

When the notches of both side columns are aligned in the same direction, proceed directly to Step 4 for installation.

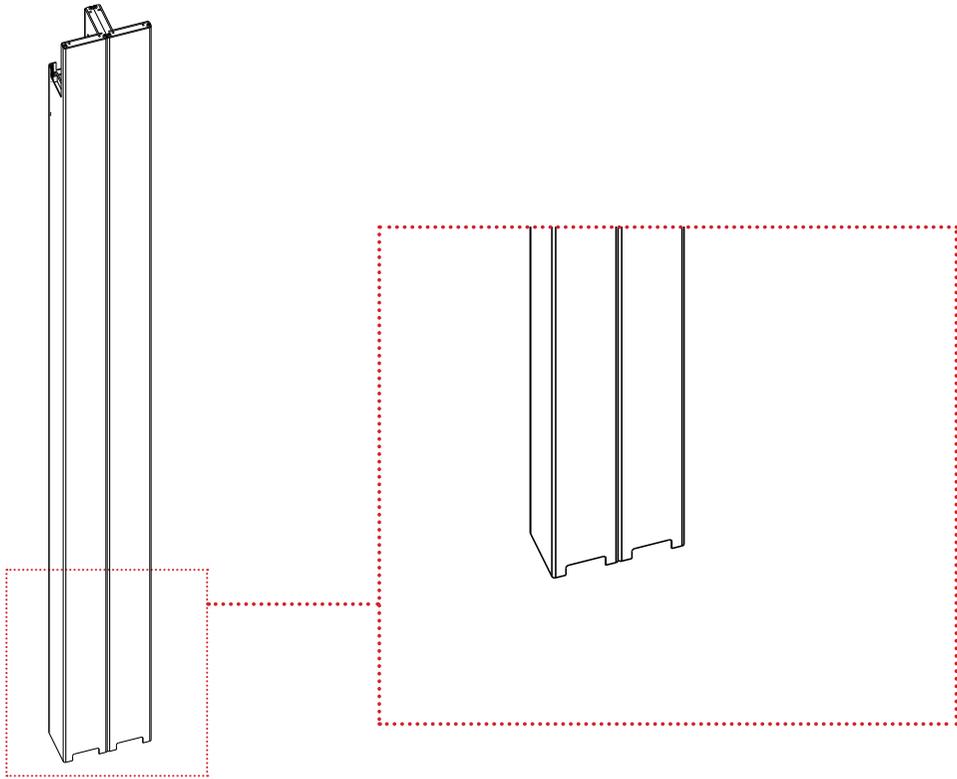


### Case 2


If the drain ports are misaligned when joining the side columns, begin the installation process from Step 1.

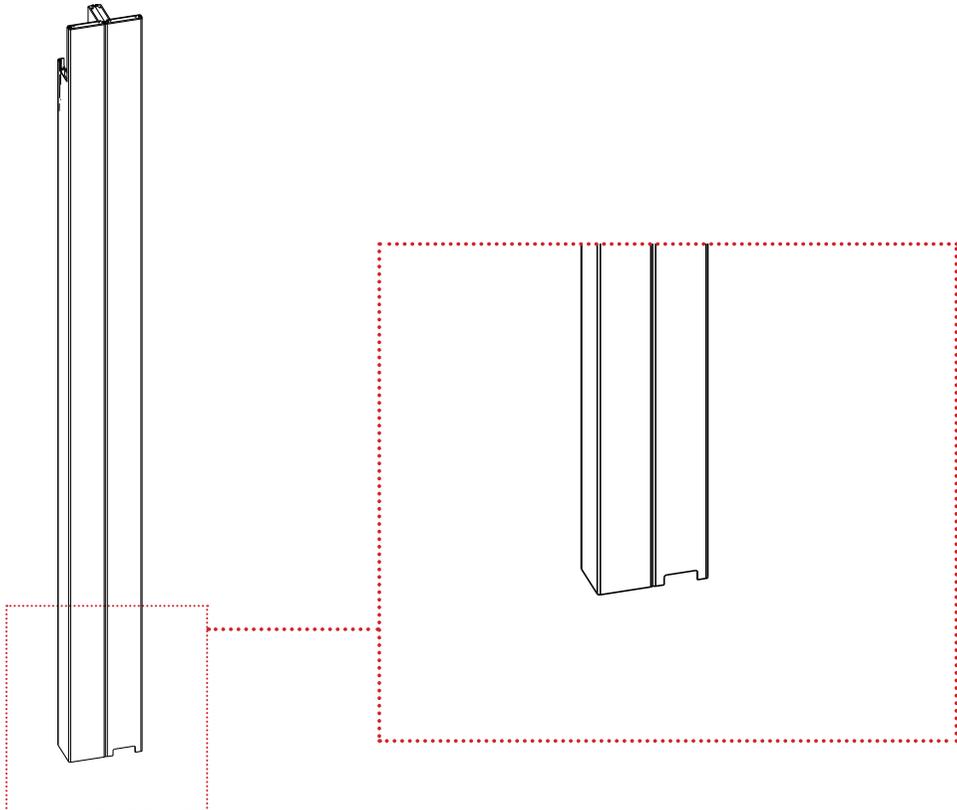

**1**  
Use 20 MM hole opener to make holes, please notice the location of holes.

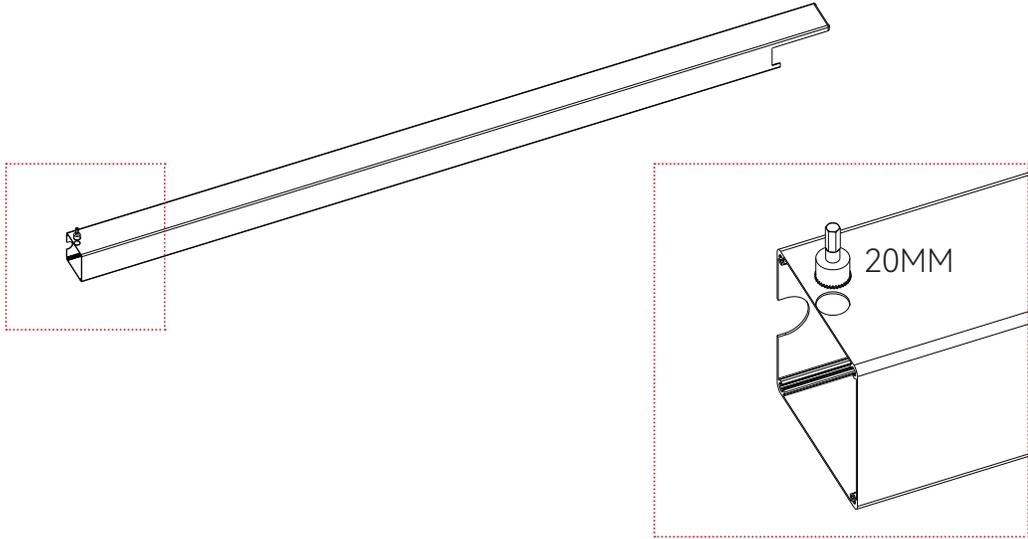


**2**  
Incorporate middle posts.

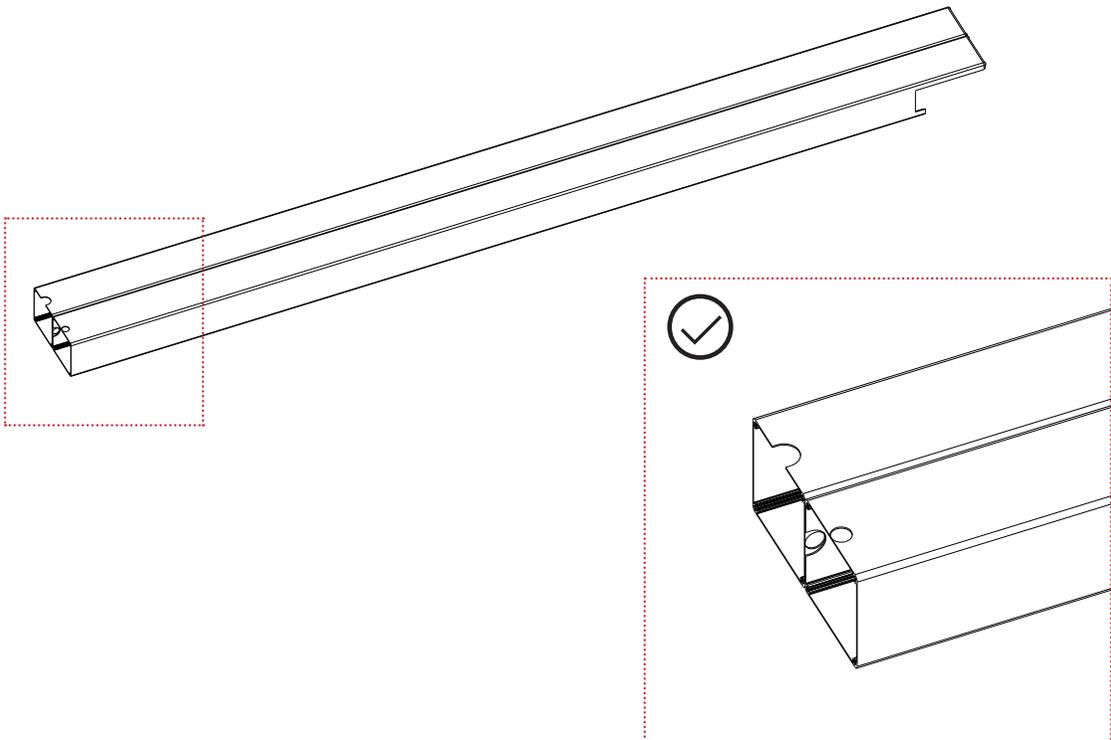



### 3

Incorporate middle posts.



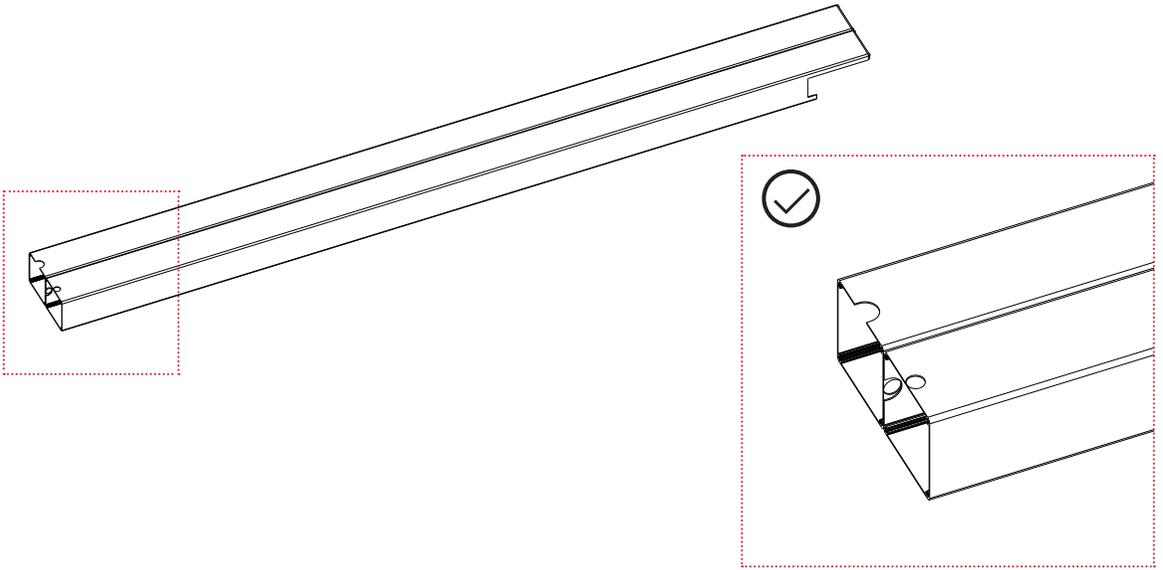


### 4




Base plate installation.

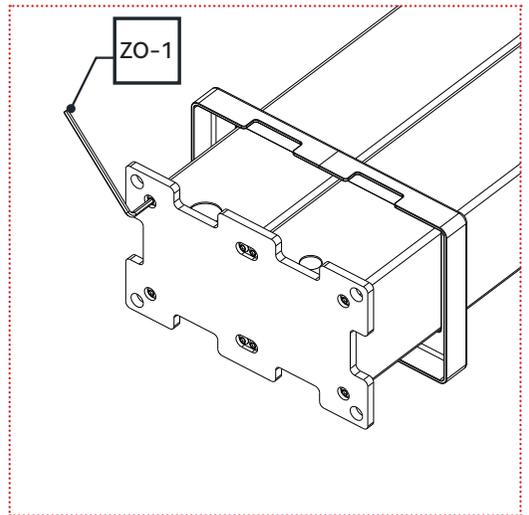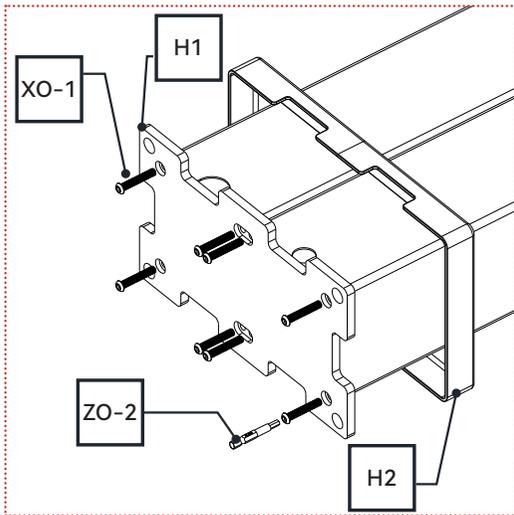

5

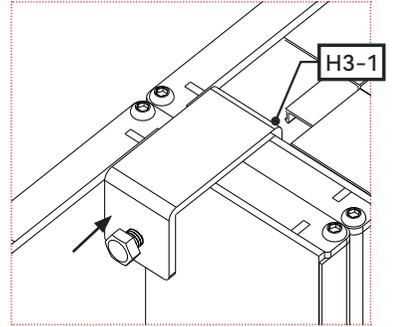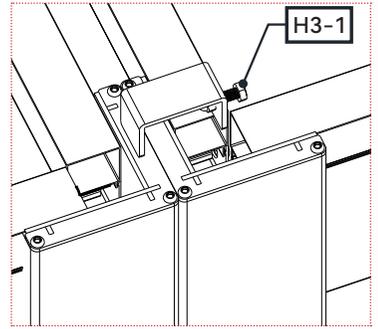
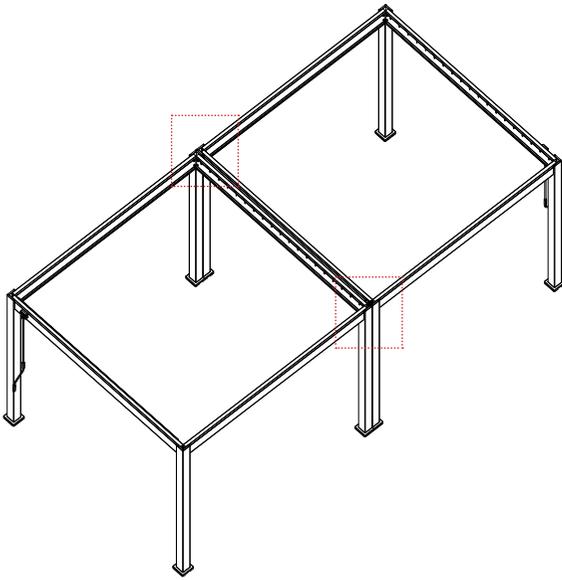


6

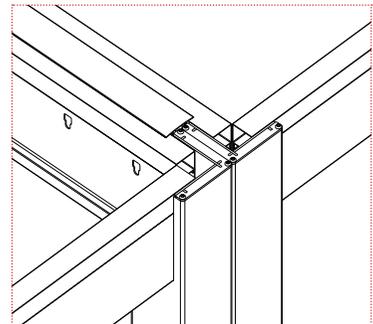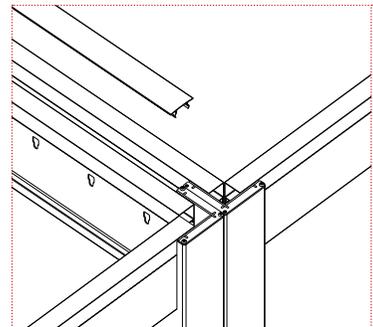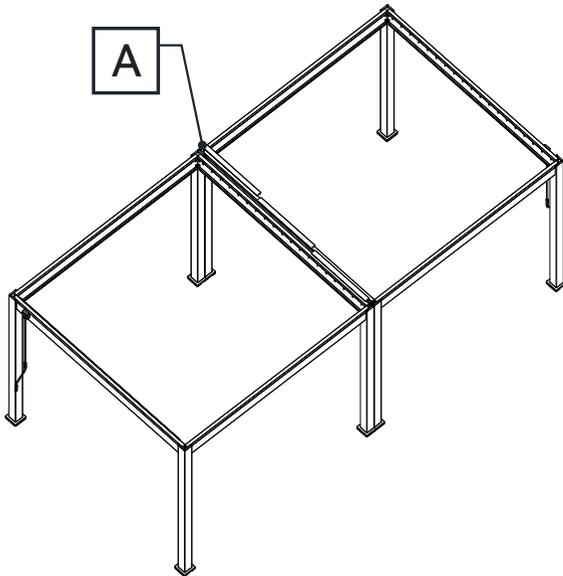

# 7

## Glueing of cover joints

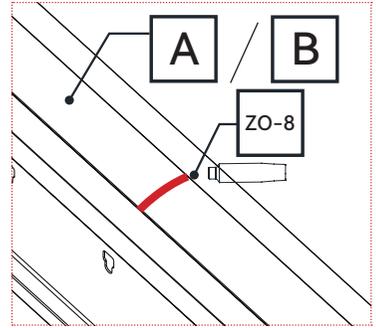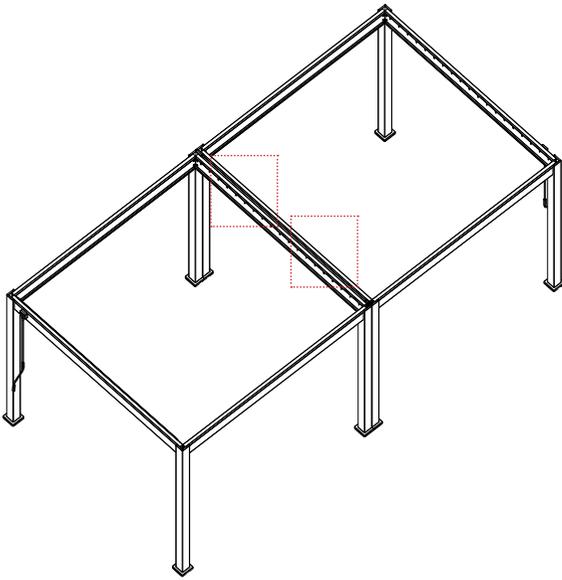





## Paragon Group USA

Customer Service Contact Information: 1-877-782-4482  
[support@paragon-outdoor.com](mailto:support@paragon-outdoor.com)

 @paragonoutdoorcompany